

ERROR CODE	MEANING	ERROR CODE	MEANING
04	Throttle not return	10	tempture reaching to the top under protection
05	Throttle malfunction	11	tempture sensor multifuncation
06	Low-voltage protection	12	current sensor multifuncation
07	Over-voltage protection	21	speed sensor multifuncation
08	Singal line of motor hall malfunction	22	battery communication multifuncation
09	Phase line of motor malfunction	30	other communication multifuncation