

---

## Bintelli Beyond Parking Brake

Your Bintelli Beyond is equipped with one of two different types of parking brakes.

### 1. Hand Parking Brake


If equipped with a hand parking brake, this lever will be located between the legs of the driver and passenger. Always ensure the parking brake is all the way in the down or lowered position before driving to avoid any damage to the vehicle.

### 2. EM Parking Brake

If you do not see a hand parking brake that means your vehicle is equipped with an EM parking brake, which is controlled by the motor. With this style of parking brake, your vehicle will automatically apply the parking brake once the vehicle is no longer in motion. To disengage the parking brake, simply put the vehicle into Forward or Reverse drive mode and step on the accelerator pedal.

It is important to note that if your vehicle is low on battery voltage, your parking brake will engage as a safety feature. If it is necessary that you roll, push, or tow the vehicle, please follow these steps:

- a. Under the row of seats with the batteries, you will find the following two sets of wires. One cable is marked with a green tag that is already connected and another is an identical wire and plug marked with a red tag.

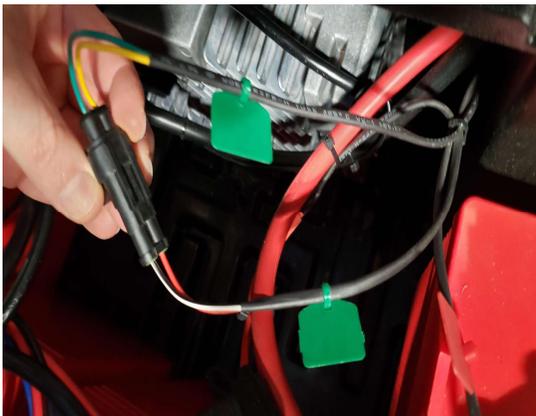

- b. Disconnect the two green marked cables and remove the plug from the red connector. Plug the green connector into the red connector.



- c. The EM brake should now be disengaged and the vehicle can now freely roll. Be sure to switch the “On/Off” switch on the dashboard to “Off” before pushing, rolling, or towing the vehicle to prevent vehicle damage.
- d. Once the vehicle has reached its destination, reconnect the two green tagged cables and replace the cap on the red tagged cable connection. Your vehicle should now have its EM brake re-installed and function as normal.